


Assembly Instructions

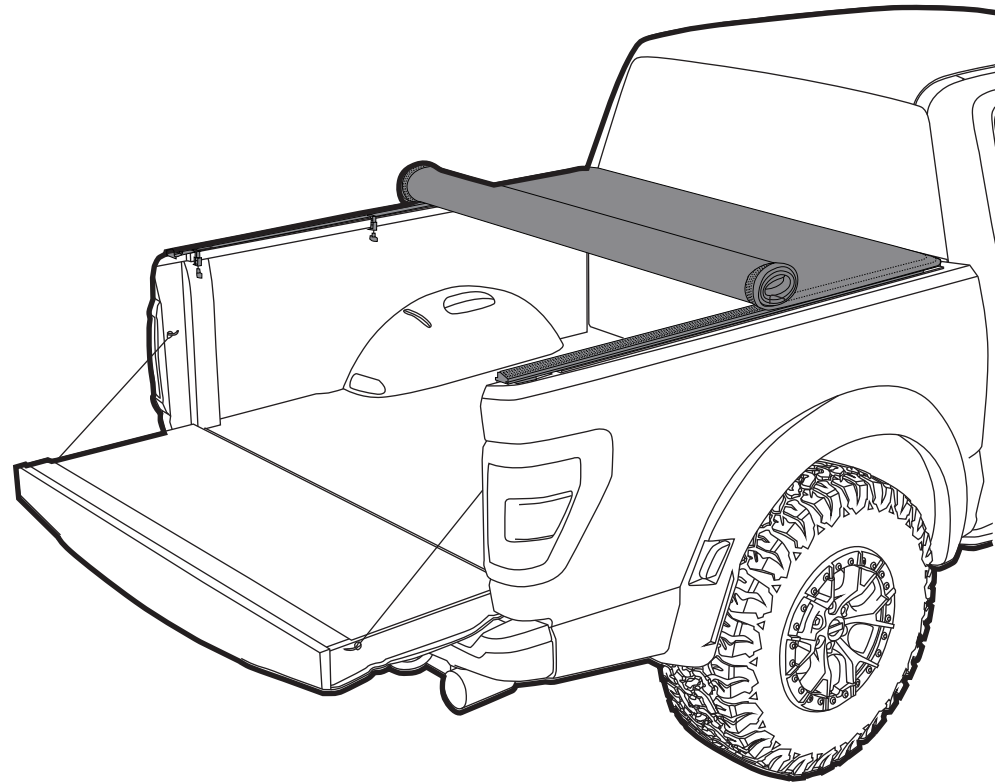

SOFT ROLL UP TONNEAU COVER

Part List

	5FT	5.5-6.5FT	8FT	
①	X1	X1	X1	Cover Roll Assembly
②	X2	X2	X4	Side Rail
③	X4	X6	X8	Mounting Clamp Set
④	X4	X6	X8	Clamp Foam Pad
⑤	X1	X1	X1	Seal Strip
⑥	X1	X1	X1	4mm Hex Drive
⑦	X2	X2	X2	Replacement Bolt

Warning


1. Tonneau cover must be completely secure in the closed position or opened position while driving. **DO NOT DRIVE** with cover in partially opened position.
2. Clean the debris before rolling up the tonneau cover.
3. Periodically check to ensure all clamps remain secure and tight.
4. Remove the tonneau cover before towing the truck from the rear.

Step 1:

1. Clean the bulkhead and bedrail before installation.
2. For Tacoma trucks, stick the seal sticker on the bulkhead bar.
3. Stick the seal strip onto the bulkhead.





Step 2:

1. Place the cover roll assembly on the front truck bed rail against the cab.
2. Loosen the screw on mounting tab and slide into side rail.
3. Re-install the screw to attach the side rail to cover roll assembly.

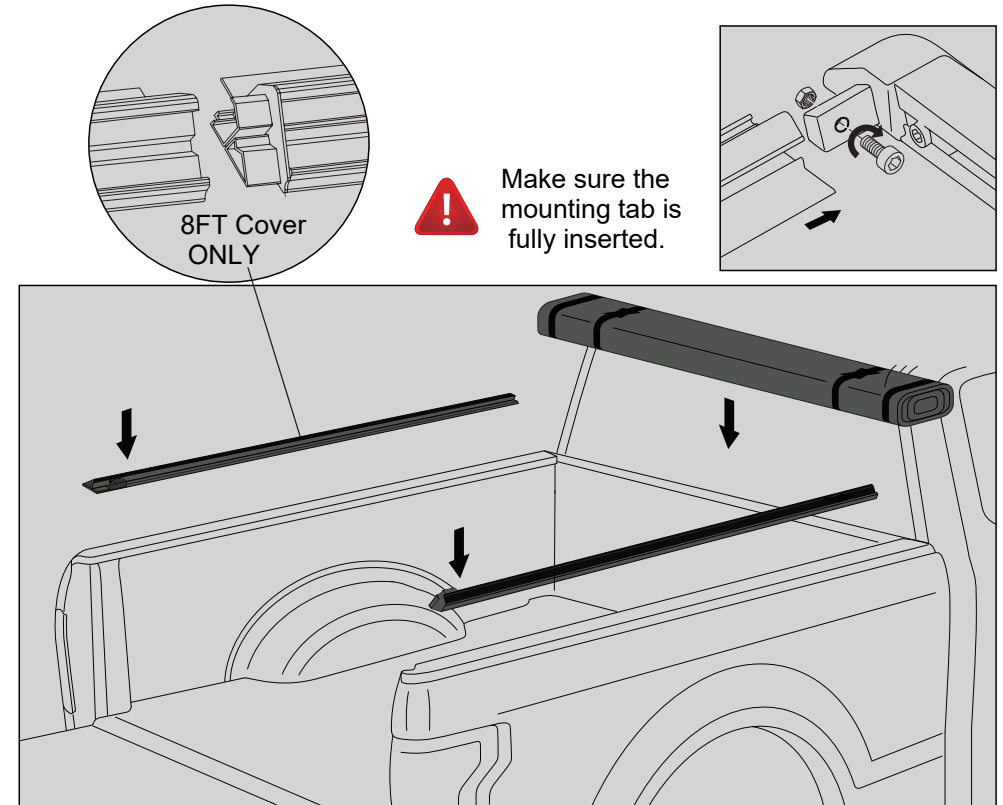


Step 3:

1. Attach the clamps to the side rail and truck bed rails.
2. Stick clamp foam pad onto bed rail for paint protection.

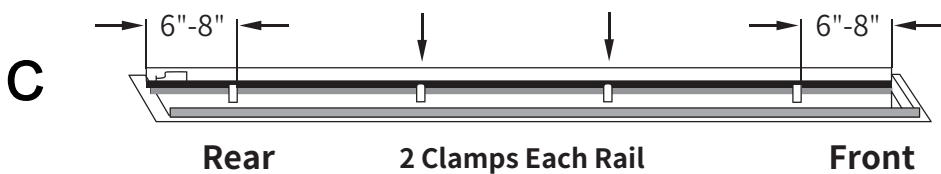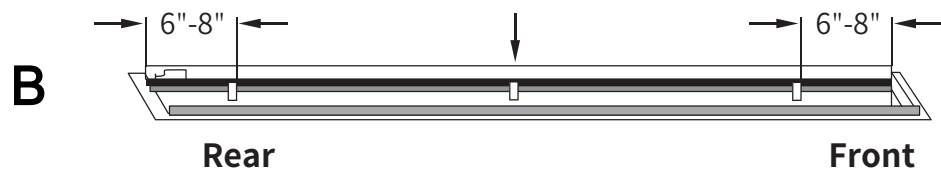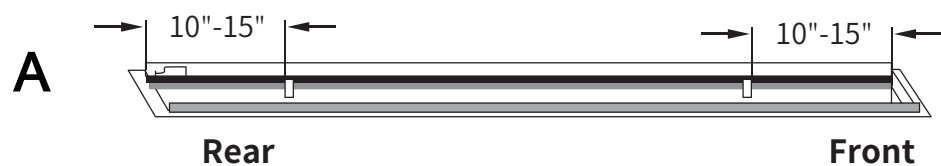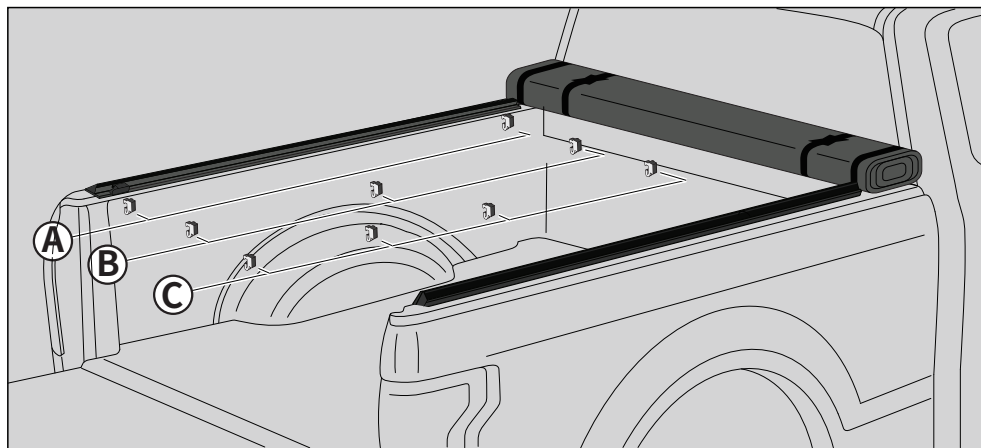


Step 4:


1. Tighten the clamps after the whole cover assembly is in place.
2. Hand tight ONLY, do not use power tools.

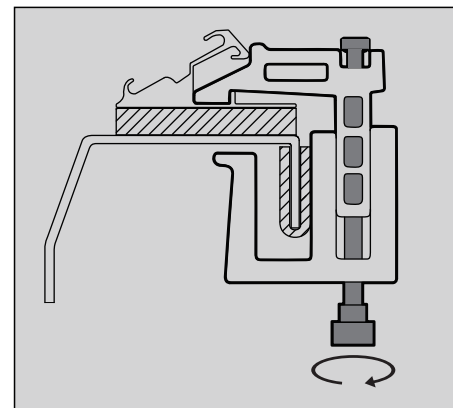


Without Utility Rail

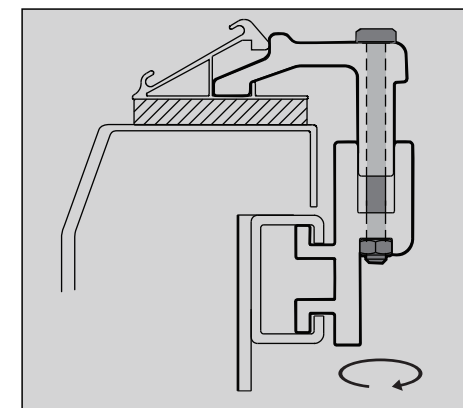


With Utility Rail

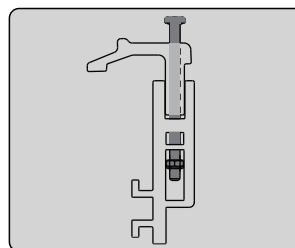

For Nissan Frontier

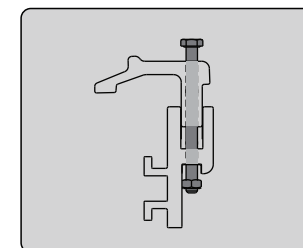

For Nissan Titan

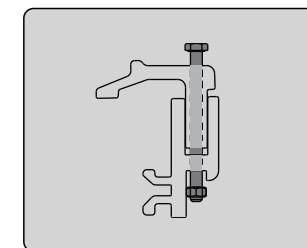

For Toyota/Jeep

Step 5:


1. Unlock the safety straps.
2. Roll the cover over the side rails.

Note:
Do NOT let the cover slip off the side rails.



For Frontier and Gladiator trucks, select proper lower clamp depending on vehicle with or without utility rails.


Assembly Instructions

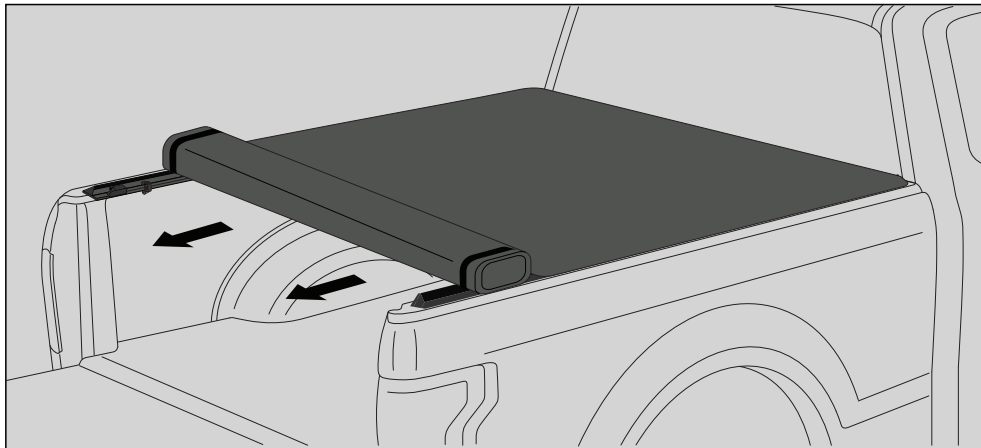



Step 6:

1. Push down the end of cover to close.

Note:
Latch the cover with tailgate open.

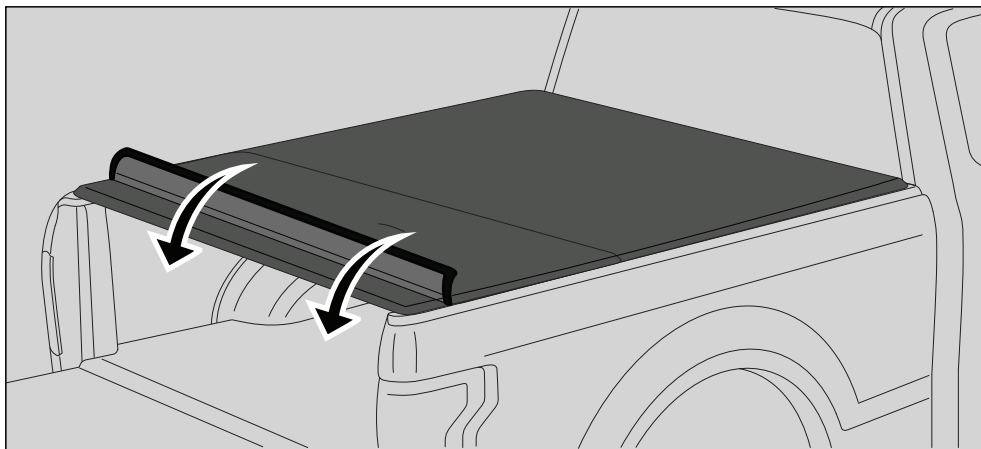


Assembly Instructions

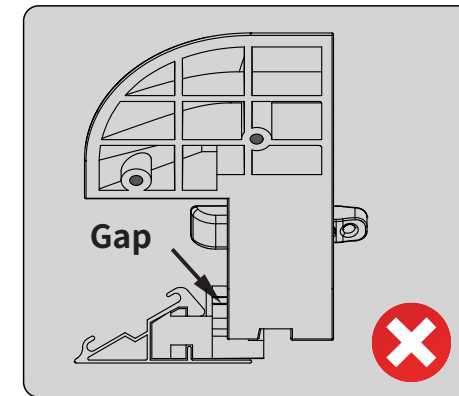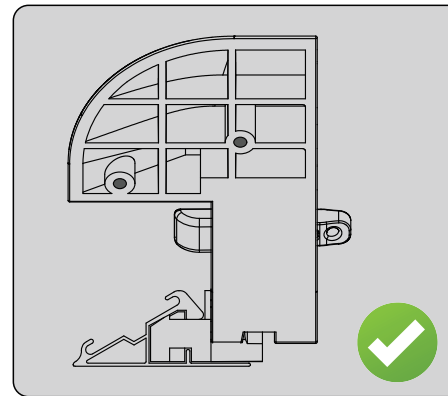

! Make sure the locking clip on both sides is completely inserted into the side rails to avoid the end of the cover becoming unlatched.


Step 7:

1. Press along the edge to secure the Velcro tape.

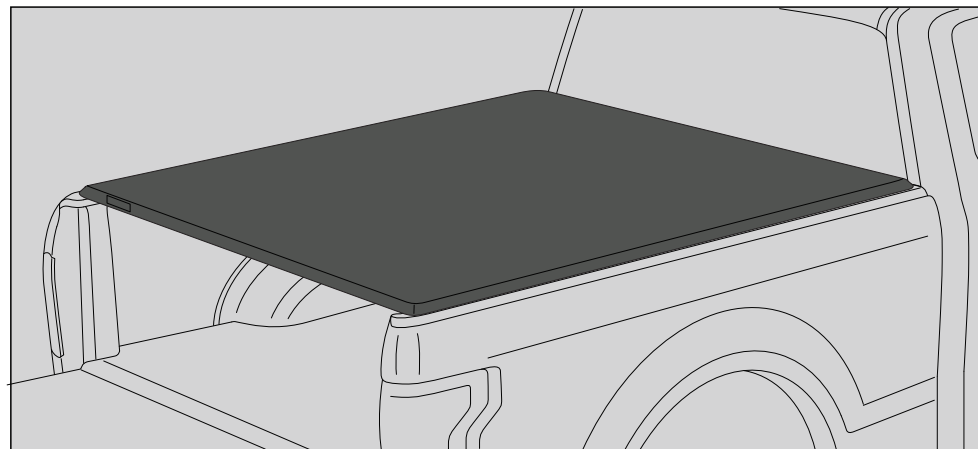




Step 8:

1. Clean the snow and any debris before rolling up the cover.
2. Pull the cable to unlatch the cover.
3. Carefully roll up the cover. Ensure the cover does not slip off the side rail.
4. Secure the cover roll with safety straps.

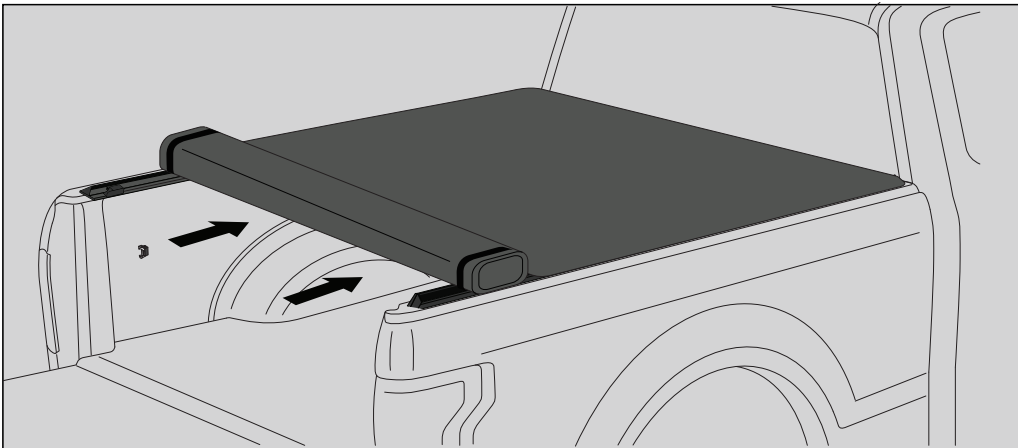

Special Instruction for Tacoma Trucks:

1. Remove the bulkhead bar.
2. Stick the seal on both ends of the bar.
3. Install the bulkhead bar back.

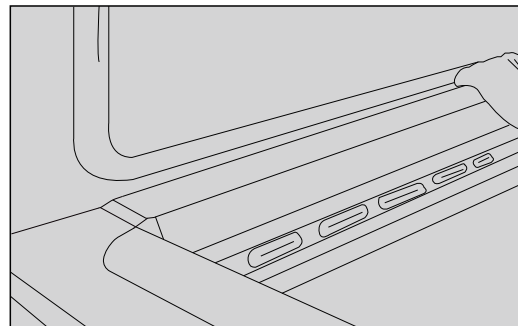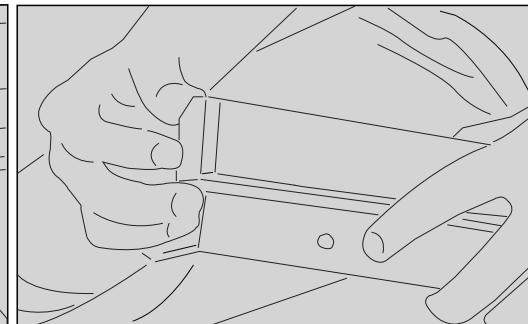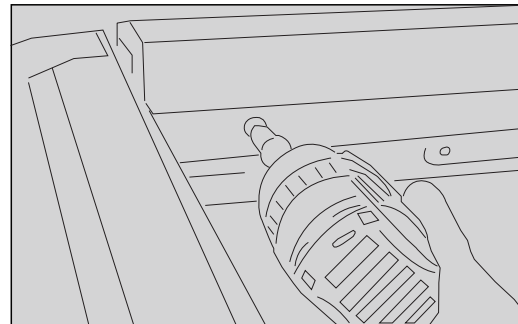


Maintain and Repair

Tension Adjustment:



The cover assembly has been set to a moderate tension to keep the cover tight and wrinkle-free.

If you wish to adjust the tension, simply loosen the socket head bolt on the tension plate and slide the plate.


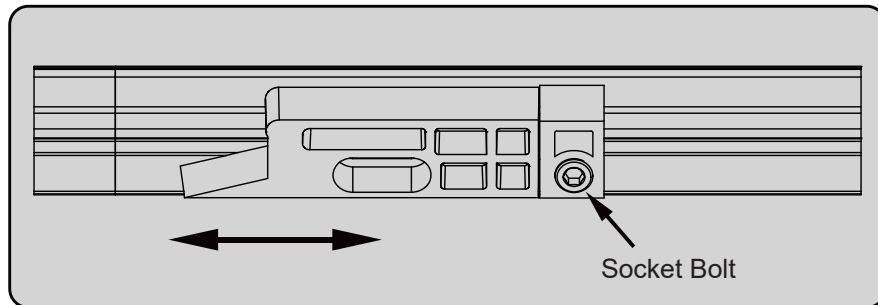


If Cover Doesn't Stay In Latched:

1. Make sure the locking clip is fully inserted. Check both sides.

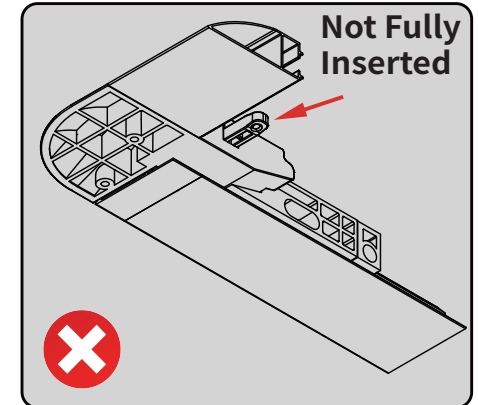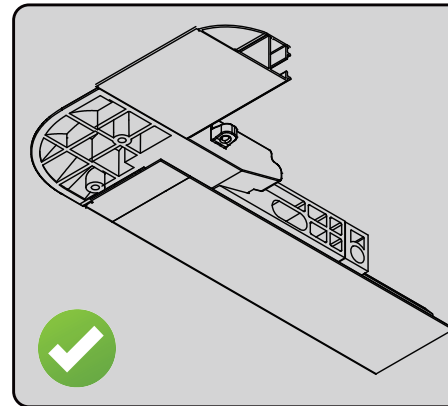

2. Adjust the tension control unit towards the tailgate on both sides.

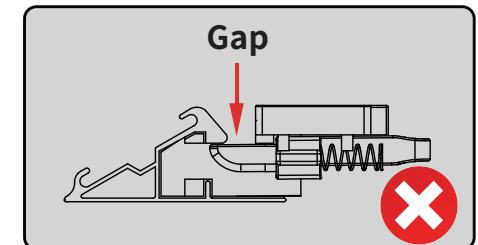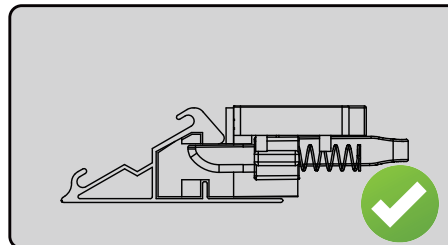

3. If the locking clip is still not fully inserted, loosen the mounting clamps and adjust the side rails close to the cover's rear latch end.

4. Re-tighten the mounting clamps after the cover is latched.